


Remove:

- the crankshaft pulley immobilising the engine flywheel using a screwdriver,

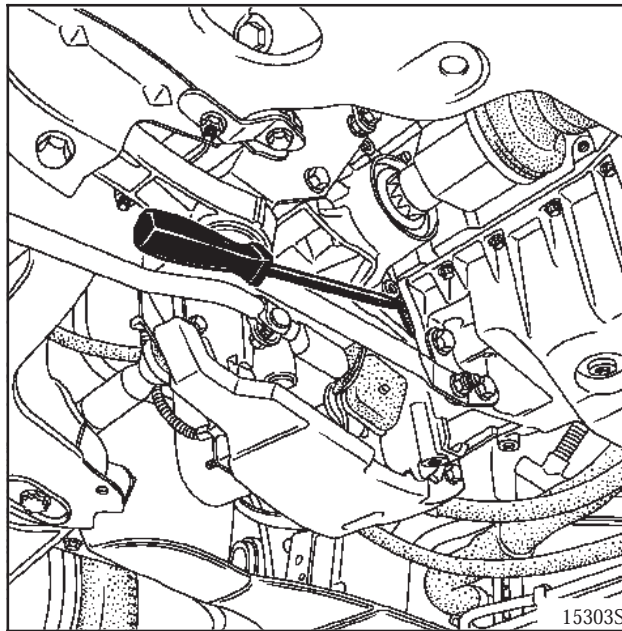

- the alternator upper support,
- the upper timing cover (2)
- the intermediate timing cover (1).

