


REAR BEARING ELEMENTS

Brake hub / disc


33

The brake discs cannot be ground. The disc must be changed if it is significantly worn or scratched.

TIGHTENING TORQUE (in daN.m)	
Caliper yoke mounting bolt	6
Wheel bolt	9
Stub axle nut	17.5


REMOVAL

- Remove:
- the two caliper yoke mounting bolts,

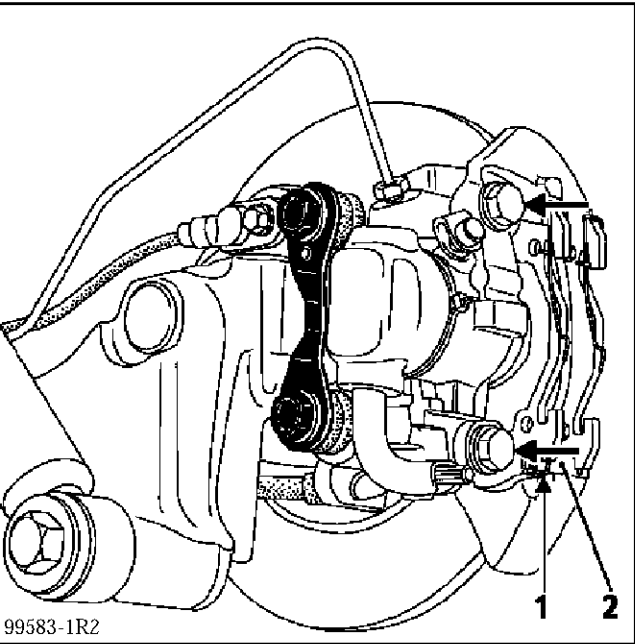

- the stub axle nut,

NOTE: to remove the lower bolt, it will be necessary to remove the clip (1) and move aside the cotter pin (2).

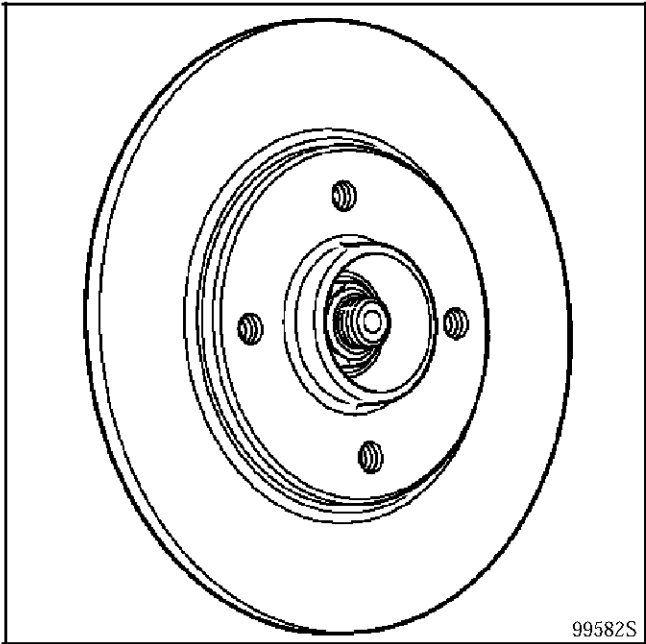

- the disc.

REFITTING

Refit in the reverse order to removal.

Coat the bolts with Loctite FRENBLOC.

Press the brake pedal several times to bring the piston into contact with the linings.

NOTE: ensure that the deflector (3) is refitted the right way round. There is a chamfer on the deflector so that it is correctly in contact with the stub axle.

