



Scottoil: Suzuki Bandit 1250 Fi (2007)

Install Guide for Suzuki Bandit 1250 Fi (2007)



Locate the vacuum – there is a vacuum pipe, as shown below left.

Cut into this pipe and insert the T-Piece from the Scottoil kit.


Then press the Damper Elbow, part number 4, onto the third leg of the tee.



The RMV can be mounted on the frame or under the seat.

The more vertical the RMV the better and remember to avoid exhaust and engine components.

For further information, see our easy step installation guide – 'RMV Positions, General'.

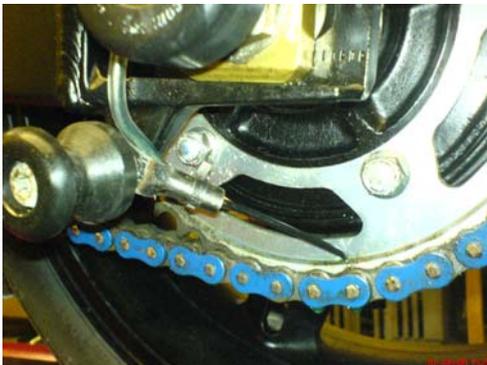

The Dispenser Assembly, shown left, is routed along the Swingarm using Dispenser Mounting Sleeves & Glue and secured to the paddock stand bobbin mount using a cut down Dispenser Plate, part numbers 19 & 20.

Note: an epoxy resin (eg. Araldite) is req'd to bond the sleeves to the Swingarm.

The nib should feed the sprocket between the 6 & 7 o'clock positions, with the cut face facing outwards, as shown bottom left.

Note: Picture shows a similar Swingarm



Note: This is a generic image

Once fitted, fill and prime the system and set the adjuster knob to 'prime'.

Start the engine and turn the adjuster knob until a flow of between 1 and 2 drops per minute is achieved.

Check the condition of your chain after a ride, and then adjust as required.

If you have any further comments or queries, and are unable to resolve them using our website, please do not hesitate to call technical on 0141 955 1100 or email technical@scottoiler.com for assistance. Thank you.

Scottoil Ltd. 2 Riverside, Milngavie, Glasgow, G62 6PL Tel. 0141 955 1100 Fax. 0141 956 5896 www.scottoiler.com

